

SUPER SNIPER

M50

ACCURATE COMPETITION






Users Restricted to 14
Years of age or older

Use 6mm BB Bullet

- One Piece Precision Metal Barrel(449mm)
- Adjustable Hop-up System
- Effective Long Range Shooting(55m-65m)
- Complete Picatinny Mounting Rail Systems
- Fully Adjustable Butt Stock
- Ultimate Bolt Action Airsoft Spring Rifle
- 一体式精密金属枪管
- 可调节Hop-up系统
- 高性能, 高精度射击系统
- 射击距离达55-65米
- 一体式精密金属战术导轨
- 可调节枪托垫片



WARNING:

	DANGEROUS: NOT A TOY. Adult supervision required. Misuse or careless use may cause serious injury.
	FOR AGES 14 YEARS AND UP-Must be 14 years If age to purchase;minors require parent or legal guardian supervision to operate
	EYE PROTECTION REQUIRED - Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.
	READ INSTRUCTION BEFORE OPERATING - Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
	DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - It may confuse people and may be a crime. Police and others may think it is a firearm, Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

Parts added * symbol are suitable for specific packing only.
注: 有带*之配置只用于特定包装

WARNING 注意




Always read through this manual before operation
使用前请阅读此说明书

- Read through this manual before shooting, paying special attention for safe operation
使用前请通读此说明书, 特别注意关于安全方面的操作。
- Thoroughly understand the warnings and cautions for safe operation
为安全起见, 务须透彻理解警告及注意事项。

CAUTION 注意

- Always observe warnings and cautions strictly.
务请严格遵照警告事项
- Failing to do so may cause injury, accidents, or damage to the gun.
不当操作可能会引起伤害事故, 或损坏枪支性能。

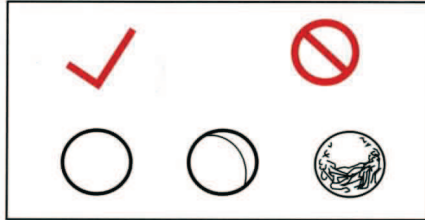

Always use precision BB Bullets for this air gun. Never use any used BB bullets.

请使用精密BB弹, 不要使用任何使用过的BB子弹。




Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.

不可把人或动物当作目标瞄准或射击。请把选择杆拨在安全档, 除非准备射击安全目标。



Do not brandish in public, do not alter the coloration and warnings-such an action is dangerous and may be a crime.

切勿在公众场合展示本汽枪, 它会引起公众的不安。

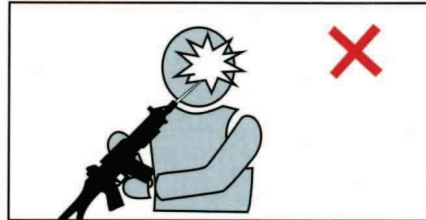


Do not look directly into the gun barrel to avoid accidental discharge of BB.

不要直接地看枪管, 避免BB弹意外发射。




Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

切勿把枪侧置射击, 因为上翻弹(HOP UP)功能会导致弹道偏向左侧或右侧。

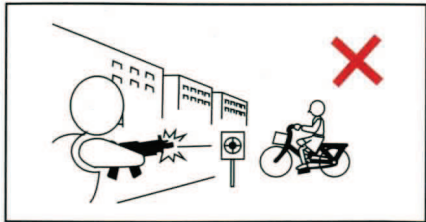


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

选择一个安全的地方操作气枪, 避免在有人和汽车的路上操作气枪。

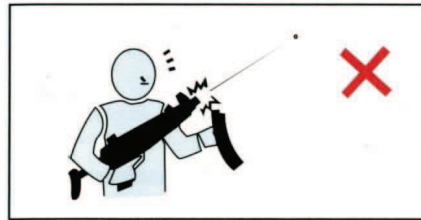

There are cases that bullets remain in the gun after the magazine is disconnected, pulling the trigger carelessly is extremely dangerous. After towards a safe direction and fire few bullets confirm that no bullets remain in the gun. Then attach the protective plug to the muzzle.

有时在卸去弹盒后仍会有BB弹滞留在枪体内, 此时不小心扣动扳机是非常危险的, 把枪口朝向一个安全的方向并上膛发射, 以确保没有BB弹滞留在枪内, 然后把保护帽系上枪口。

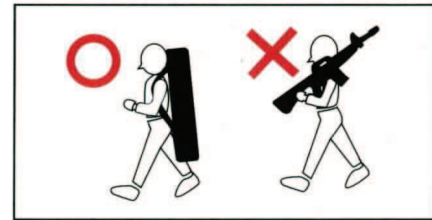


When you carry the air gun, attach the protective plug, set the selector lever to the safety position and put it in a case or bag.

当携带气枪时, 须把功能调杆到安全位置并且把枪放进袋子。

1 Component Chart

部件名称

Kit A (Receiver & Barrel):

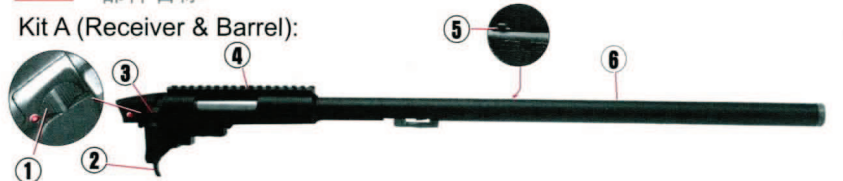

Kit B (Stock):



Screw Set & Allen Wrench

Screw A: Long Screw
Screw B: Short Screw
Allen Wrench

- | | |
|---|---|
| ① Safety/Fire Selector 保险/发射选择杆 | ⑧ Magazine Release Button 弹盒卸钮 |
| ② Triger 扳机 | ⑨ Lower Picatinny Rail 下战术导轨 |
| ③ Cocking Handle 上膛阀门拉杆 | ⑩ Triple Fully Adjustable Butt Pads 枪托调节片 |
| ④ Upper Picatinny Rail 上战术导轨 | ⑪ Magazine 弹盒 |
| ⑤ Hop-up Adjustment Switch
Hop-up调节钮 | ⑫ Sling 背带 |
| ⑥ Barrel 枪管 | ⑬ Deluxe Spring Operated Speedloader
快速充弹器 |
| ⑦ Butt Stock 枪托盖 | ⑭ Screw Set and Allen Wrench 螺丝, 板手套件 |



Warning! Before you follow the assembly instruction, make sure to remove the magazine and set the Safety/Fire Selector to the "SAFE" position.

警告! 装配操作前请务必移去弹盒并把保险/发射选择杆拨在"SAFE"位置。



Safety/Fire Selector

2 Assembly 装配

1. Install Kit A (Receiver & Barrel) into Kit B (Stock) as in Fig 2.1

如图2.1所示,把套件A装入套件B中

2. Lock Kit A into Kit B with screws provided as shown in Fig 2.2. Use the supplied Allen wrench to tighten the three Screw including Screw A (middle of the stock), Screw B (front of stock), and the factory pre-installed screw near trigger guard

本产品配有螺丝A、B,及二种规格的六角扳手,如图2.1所示,这些螺丝装入相应孔位,并用相应的六角扳手锁紧(螺丝A用M4扳手,螺丝B用M3扳手)



Don't confuse using screws, you must stop tighten the screws when you feel heavy otherwise the gun may be damaged!

螺丝规格跟枪体组合不可搭错,螺丝旋转到手感加重时不可再旋转,以免损坏枪支。

3 Install Stackable Butt pad 安装可叠加式枪托调节片

The length of the rifle can be extended by installing all 3 or any number of stackable butt pads, Each butt pad can extend 3/8 inch in length. (Fig 3.1)

枪托长度可通过加装1-3片枪托调节片来调整,每加一片调节片可增加约1厘米。

1. Disengage the Butt Pad Cover by loosening 2 locking screws.

旋开枪托后端2颗螺丝,拆开枪托盖

2. Install Stackable Butt Pads together. Put the Butt Pad Cover over the outer-most Stackable Butt Pad.

装入1-3片枪托调节片

3. Install and fasten the two Locking Screws.

装入枪托盖,锁紧2颗螺丝



4 Setting the magazine 装入BB弹

1. Load Bullets into Deluxe Spring Operated Speedloader
把BB弹装入快速充弹器

- ① Open the Speed Loader Cap.
打开进弹盖,放入6mm BB弹

- ② Locate and push the Rod Release Button to release the Spring Rod. (Fig 4.1)
按下压棍开关按钮,释放弹簧压棍

2. Feed Pellets From Speedloader into Magazine
把BB弹从快速充弹器压入弹盒中

- ① Hold and disengage the magazine by pressing the Magazine Release Button. (Fig 4.2)
按下弹盒卸钮,卸下弹盒(图4.1)

- ② Align The Tip of Speed Loader with the Pellet Drop of the Magazine. (Fig 4.3)



把快速充弹器的出弹嘴对准弹盒的BB弹入口。

- ③ Push the spring Rod to load Pellets into the magazine.
Repeat this process until the magazine is full.

按下弹簧压棍,把BB弹充入弹盒,重复此过程直至弹盒充满为止。

- ④ Insert the loaded magazine back into the rifle.
把弹盒插入枪体中

- To remove magazine: Press the Magazine Release Button to disengage the magazine. (Fig 4.2)

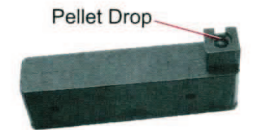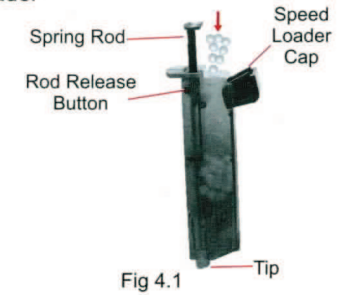

5 Firing (operate the gun after confirmation of safety) 射击(须确保环境安全才可发射)

- ① Set Safety/Fire Lever to "Fire" position. (Fig 5.1)

把保险/发射选择杆向右推,直至露出红点位置为发射档位。

- ② Flip the cocking handle upward and pull it backward until it clicks. Then push it back to the original position to complete cocking in one continuous movement. (Fig 5.2 Fig 5.3 Fig 5.4)

把上膛拉杆拔向上并向后拉至听到“咔嚓”一声,然后回位至初始位置,完成一个连续完整的上膛过程(图5.2、图5.3、图5.4)

- ③ Hold the gun firmly and rest the stock at a comfortable position.

稳固舒适地架好枪支。

- ④ Aim the rifle at your target and pull the trigger to fire.

瞄准目标,扣动扳机。


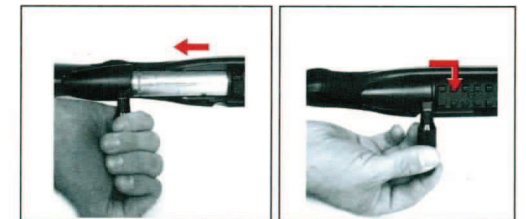


Fig 5.3

Fig 5.4

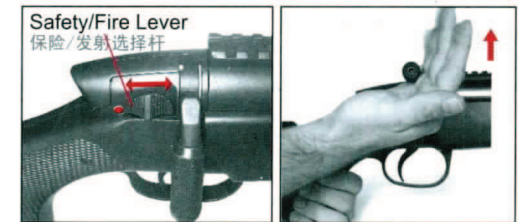

Activating the trigger carelessly is extremely dangerous. Never set the Safety/Fire Selector off the "SAFE" position or put your finger on the trigger unless you are ready to shoot at a target.

不小心扣动扳机是非常危险的,切勿把射击/安全选杆拨离"SAFE"位置,也不要把手指放在扳机处,除非你已准备射击。

6 Variable Hop Up System 可调式HOP UP 系统说明

1. Adjust Variable Hop-Up System for Best Shooting

调节Hop-Up系统

- Locate the Hop-Up Switch at the left side of the Foregrip. (Fig 6.2)
用手指握住前扶把左侧上之Hop-Up调节杆
- Slide the Hop-Up Adjustment Switch to a desired position.
轻轻滑动调节杆至期望位置。
- Shoot a few pellets, exam the trajectory and make further adjustment if necessary
发射几发BB弹,检查弹道,看看是否需再作调整
- The best positing is where the bullets fly horizontally, and the longest flying distance is obtained.
当子弹水平飞行且达到最远距离时即为最佳状态。



Fig 6.1


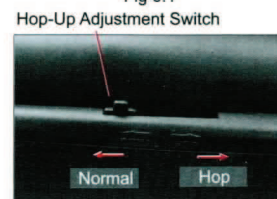


Fig 6.2

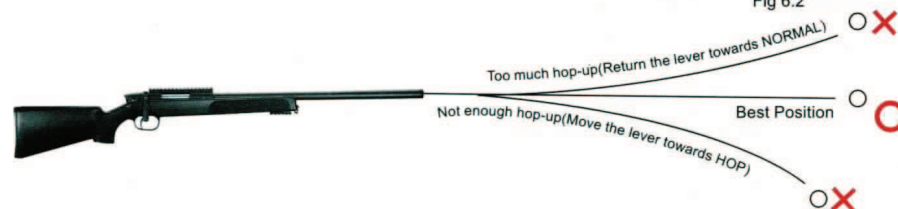



7 Adjustable Laser Aim Module Operation*(For specific packing only) 可调激光瞄准器操作*(适用于特定包装)

1 Install the Adjustable Laser Aim Module 安装可调激光瞄准器

- Disengage the Cover of Laser, Install 3 batteries Ag10, then fasten the Cover
旋开激光器后盖,装入3颗AG10扣式电池,注意对准极性方向
- Install the Laser into the Laser base, Make two adjustment holes outside
把激光器插入激光器夹片中,把激光器头部二调节孔置于外面
- Slide the Laser base on the Lower Picatinny Rail, and fasten two Locking Screws
把激光器夹片基座滑入下导轨适当位置上,旋紧固定螺丝。
- Press the switch botton of the Laser
按下激光器开关按钮



1.5VX3 "AG10"

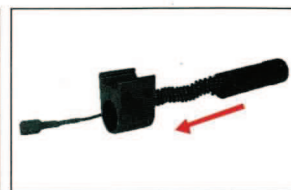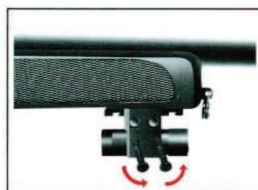

2 Adjust direction 调节射出点方向

Turning adjusting screws can adjust the sight by using the 2.5mm hexagonal key for the M5 setscrew. Turning clockwise shifts the sight up and left. Turning counter clockwise shifts the sight down and right.

把六角扳手插入瞄准器调节孔,按顺时针方向旋转,射出红点时间向左上方向移动,则向右下方向移动,二小孔可同时调节,以达到更准确效果。

Direction adjustment knob
方向调节孔




8 Maintenance 维护说明

1. Maintenance when bullet speed becomes low 射出BB弹速度变慢时的维护

- Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.
如下图所示,把棉布包扎在清洁棍上并喷上清洁剂,把清洁棍插入枪管中。

如下图所示,把棉布包扎在清洁棍上并喷上清洁剂,把清洁棍插入枪管中。

- To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.
清洁完枪管后,换上干净布条,清除枪管中多余油渍。

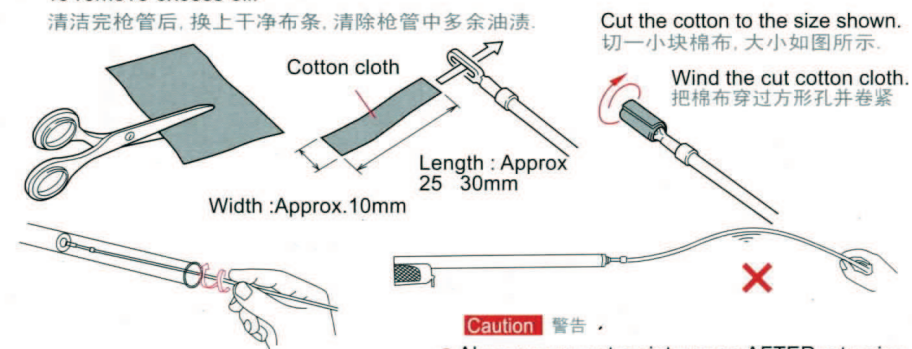

Caution 警告

- Always carry out maintenance AFTER returning the hop up lever to the Normal position.(HOP-UP)
做此维护前请务必把HOP UP 调至正常位置。
- Inserting the rod will be difficult if you hold rod at the end.
手握在末端将难于插进清洁棍

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.
握住清洁棍适当位置慢慢旋转同时逐渐插入到枪管中

2. Removing clogged bullets 卡弹处理

- Remove the magazine and return the hop up adjustment to the Normal position.
如发生卡弹时,先卸下弹匣,将上翻弹(Hop up)功能钮调至正常位置。

- Insert the cleaning rod from the load edge into the barrel, be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.

把清弹棒插入枪管(清弹棍斜面向下),BB弹从弹盒插口退出。



3. Normal Maintenance 日常养护

- Keep the rifle in clean condition.
把本产品放置在清洁地方
- Regularly clean the barrel with soft cleaning rod.
定期用洁净导棍清洁枪管
- Never used dirty, damaged or distorted bullets.
禁止用脏污的,受损的或劣质BB弹。