

# 電動氣彈槍

## FULL· SEMIAUTO

# CM.122

請仔細閱讀說明書





在操作之前必需讀熟這些說明書  
Always read through this manual before operation.

 <b>警告 WARNING</b>	
 18歲以上年齡才能使用 Only for 18 years of age or older	18歲以上年齡才能利用這支汽槍比賽使用 Operation of this air gun for competition use is restricted to users of 18 years of age or older.
 注意受損傷 Injury caution	因為BB彈能達到50-60米範圍，不小心的射擊將可能導致眼睛受損傷或其它傷害。 Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.
 注意熟讀警告指示手冊 Careful reading of Handling cautions and instruction manual	在操作之前要細心讀熟警告手冊和指示手冊操作汽槍時必須認識好警告指示 Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.


**FOR AGES:18 AND UP**

## 电池与充电器 ACCUMULATOR AND CHARGER

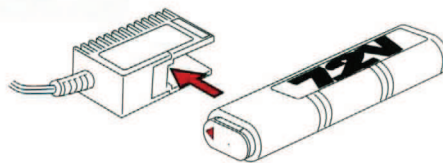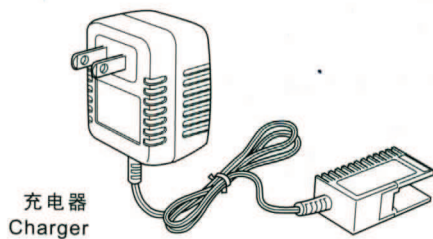


将电池插入充电器  
Insert the battery into the jack.

## 1 各部件名称 NAME OF EACH PARTS

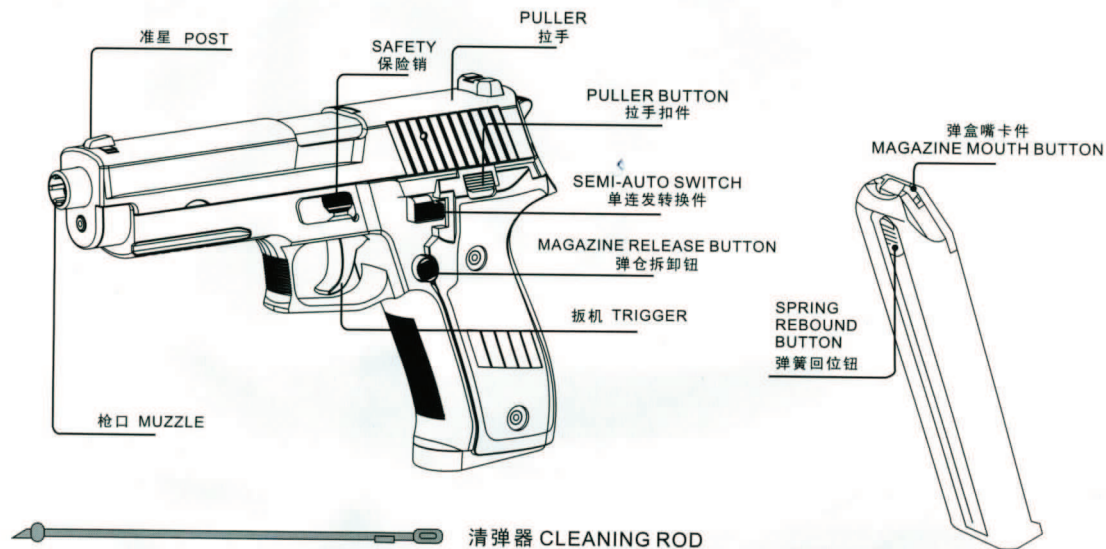


## 2 保险销 SAFETY

 ● KEEP THE SAFETY AT "SAFE POSITION" WHEN THE GUN IS UNUSED.




安全位置  
SAFE POSITION

 

射击位置  
SHOT POSITION


● USE THE FIRST FINGER TO PULL THE TRIGGER  
用食指扳动扳机

NEVER PUT THE FINGER ON THE TRIGGER BEFORE SHOOTING  
射击前切勿将手指放在扳机上。

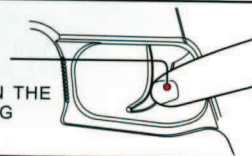

### 3 装电池 INSTALL THE BATTERY


- ① Press the puller button to unload down the puller.  
用手指按下拉手扣件卸下拉手:

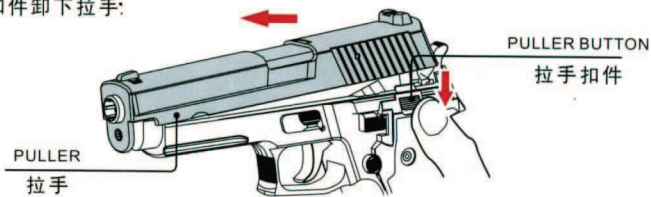

- ② Load the full-charged battery in to its position.  
将充好电的电池装上.



- ③ Fix on the puller reversely to step ①.  
将拉手按 ① 反向操作装回拉手.

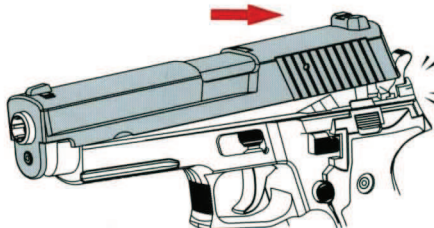

### 4 单发\连发 SINGLE \RUNNING SHOOT



Never put finger on the trigger when adjust the button  
调节按钮时请勿将手指放在扳机上



Single shoot position < ● >  
单发位置



Single shoot: the button point upward, one bullet shoot out one time.

单发: 将按钮拨向单发位置, 射击时每次只发一弹

running shoot position < ● ● >  
连发位置




a running shoot: the button point downward, more bullets shoot out one time.

连发: 将按钮拨向连发位置, 射击时可连续发射多弹




## 5 安装\拆卸弹仓 INSTALL\DISASSEMBLE THE MAGAZINE

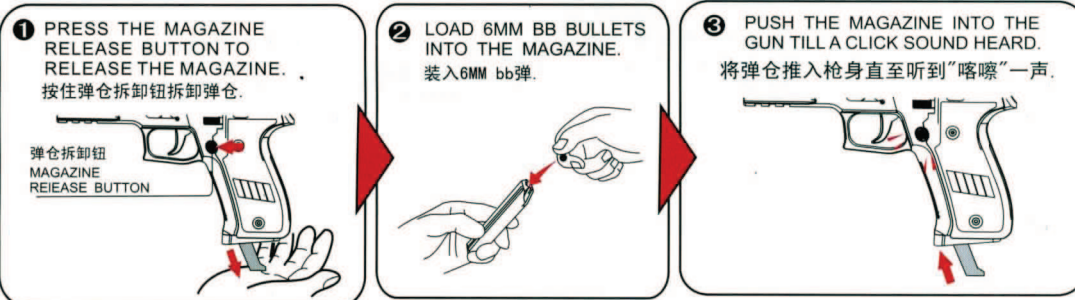

- Adjust the parabola direction with HOP-UP.

通过调节 HOP UP 调节钮  
调节抛物线的方向

THE PARABOLA  
REGULATE BUTTON  
抛物线调节钮

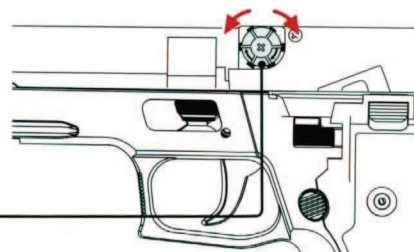

- The best position is where the bullets fly horizontally, and the longest range is obtained.

保持水平方向的射击能够使BB弹获得最远射程。





### 警告·注意

- Our company will not be responsible for trouble caused by using the bullet produced by other company.

我公司不对使用其它公司BB弹产品而引起的事故负责。

- The bunglesome bb bullet is damage with the gun. Please use the precision bb bullet of our company.

拙劣的BB弹会对枪支造成严重损害，请使用我公司的标准BB弹系列产品。

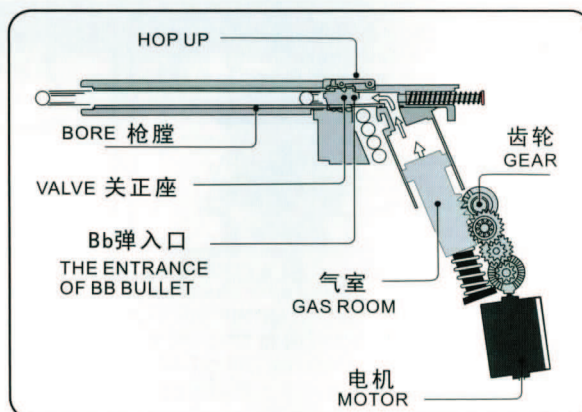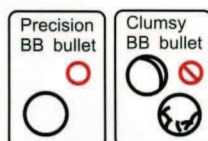



## 6 射击 SHOT

- ① Set semi-auto switch in semi or auto position.  
将单连发转换件拨在单发或连发位置。



SINGLE SHOT

  
RINNING SHOT



- ② PUSH THE SAFETY TO THE TOP.  
将安全销推到上端。




- ③ PULL THE TRIGGER TO SHOT.  
扣动扳机射击。

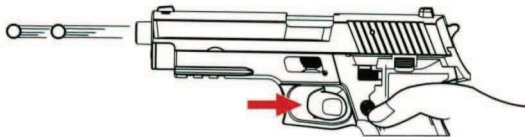


## 7 清除阻塞BB弹 REMOVE CLOGGED BULLETS

- 1 清通枪膛 CLEAN THE BORE

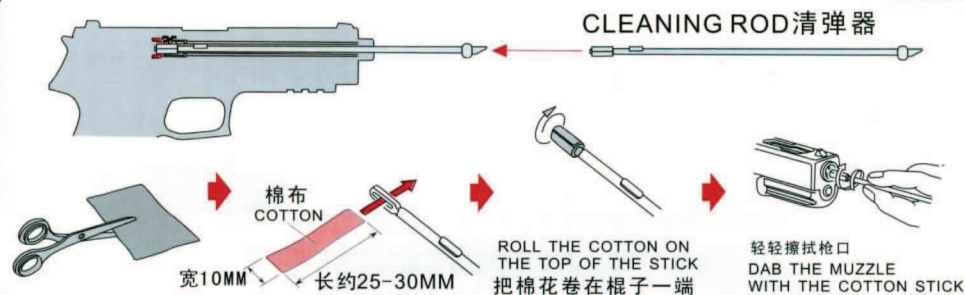

- 2 清除阻塞BB弹 REMOVE CLOGGED BULLETS

- ① Unload the magazine, insert rod into the barrel as picture showing.  
退出弹盒, 将清弹器如图所示沿枪口插入。

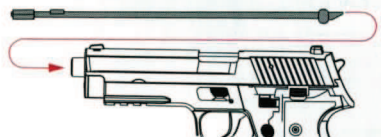

- ② REMOVE THE CLOGGED BULLETS.  
清除阻塞的BB弹。



- 3 电机的微调 ELECTRICAL ENGINEERING OF TINY ADJUST

ONLY WHEN THE MOTOR NOISE BECOMES HIGH AFTER OPERATIONS FOR ALONG PERIOD OF TIME, CONDUCT THE FINE ADJUSTMENT AS SHOWN.

若使用时间过长, 电机发出很大的噪音时, 请按如图所示对电机进行微调。

